




Black and Decker TR1278B Lever Catch-Spring Replacement

Black and Decker TR1278B toaster lever catch spring replacement.

Written By: Brea-Monique

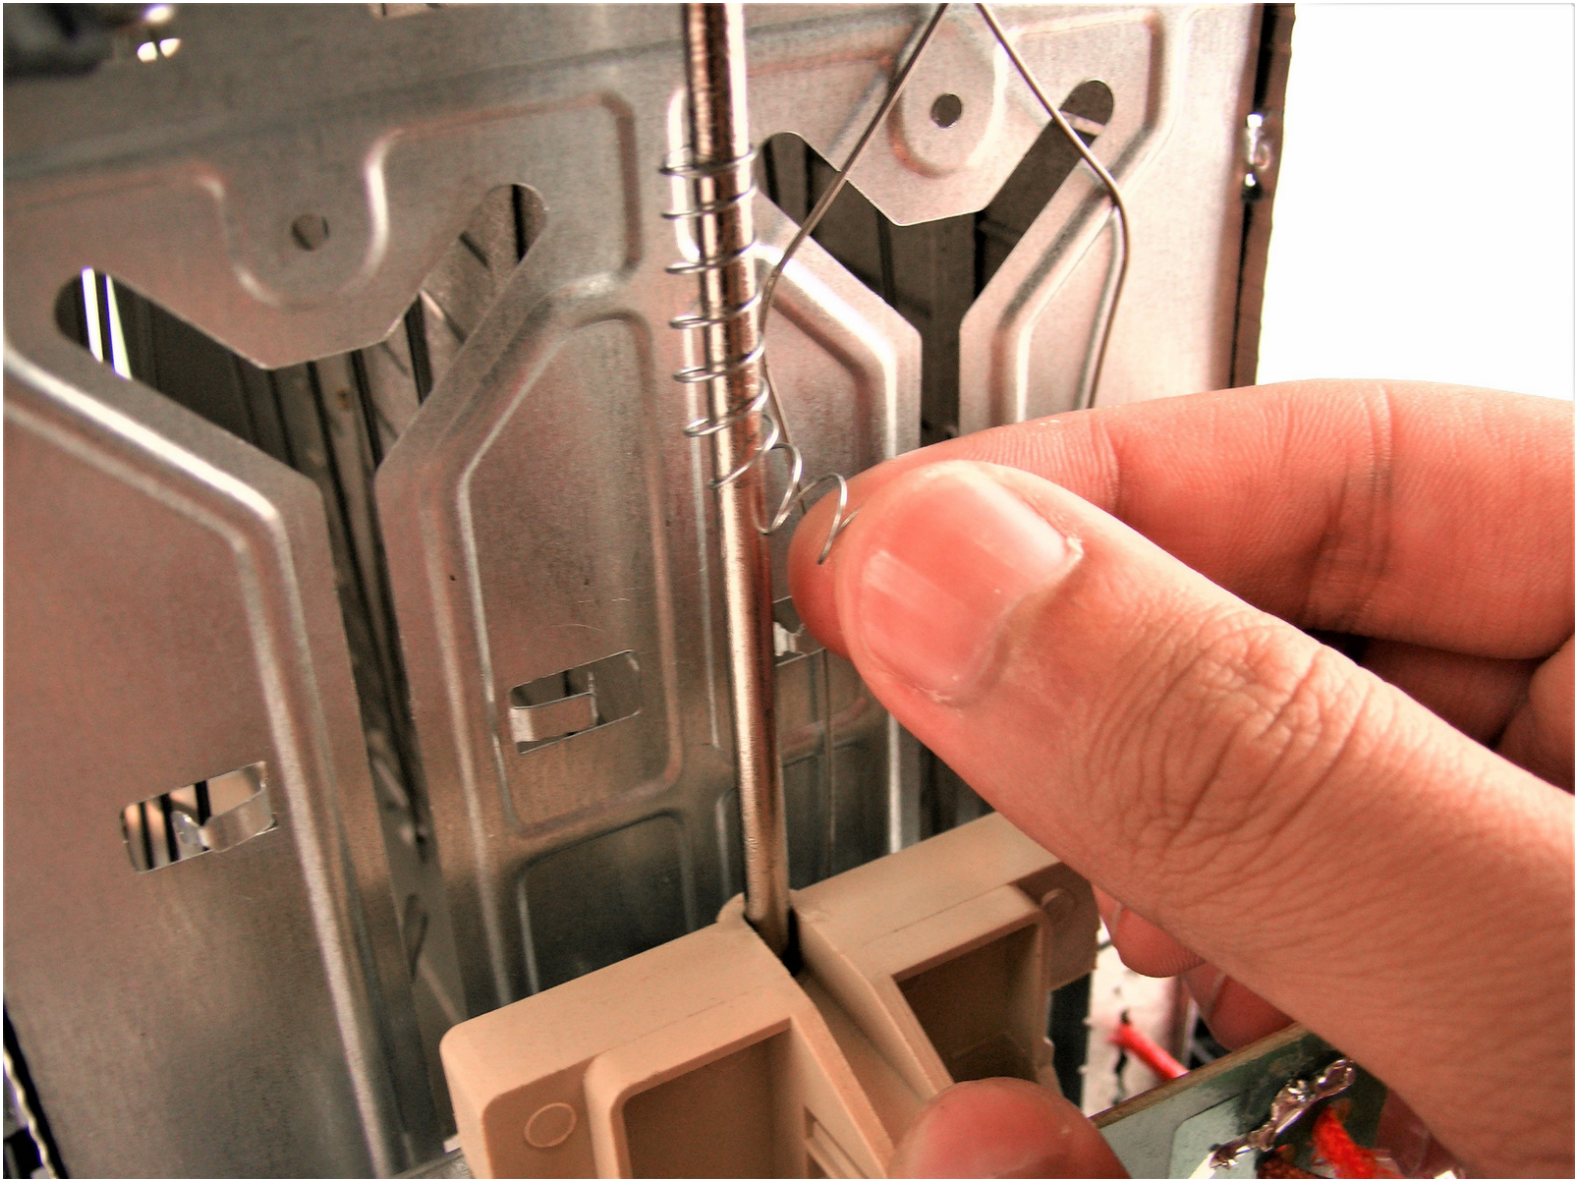

INTRODUCTION

Black and Decker TR1278B toaster lever catch-spring replacement guide.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Top Cover




- ❗ Unplug the toaster before disassembly.
- Remove the carriage lever by pulling it away from the toaster.

Step 2



- ❗ Toaster will be turned upside down. Clear crumb tray or work over a paper towel.
- Turn the toaster upside down.
- Unscrew all four 4mm screws on the bottom using a Phillip's head #2 (PH2) screwdriver.

Step 3

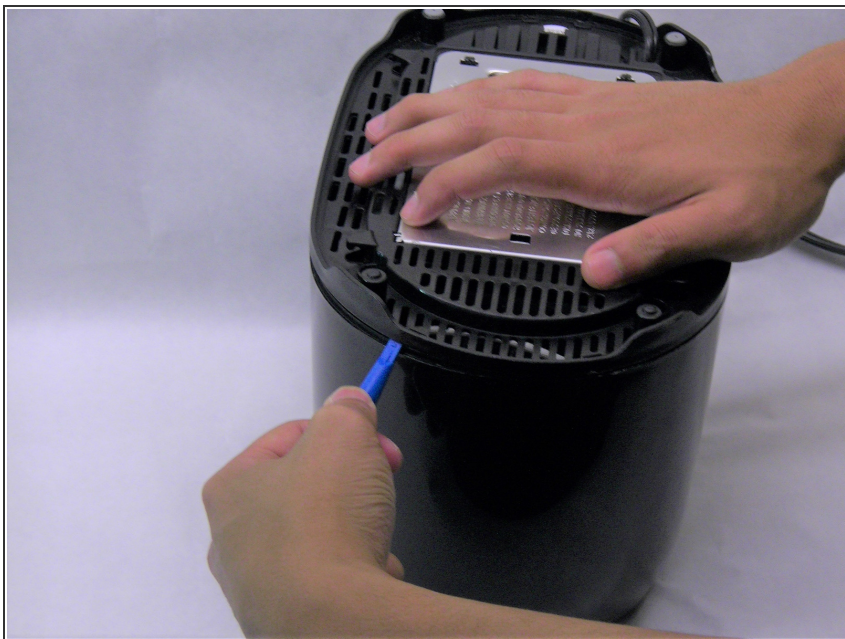


- Detach the bottom from the front cover using the plastic opening tool.

Step 4




- Turn the toaster right side up.
- ⚠ Support the bottom. The ribbon cable that connects the toaster to the front cover can be damaged.
- Lift the front cover.
- ⚠ Lift carefully. Again the ribbon cable can be damaged.

Step 5

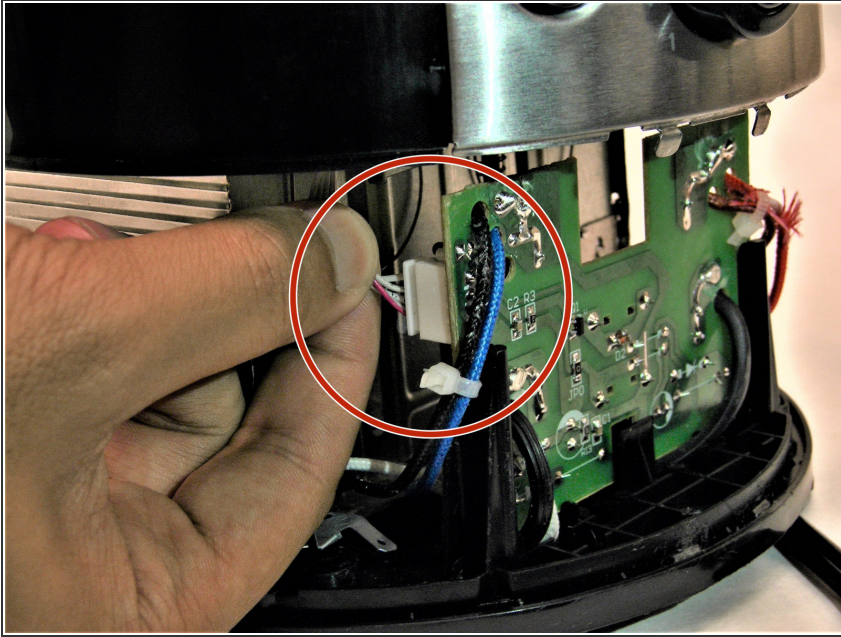


- Detach the bundled cable connector from the toaster by carefully pulling it away from the circuit board.

Step 6 — Lever Catch Spring

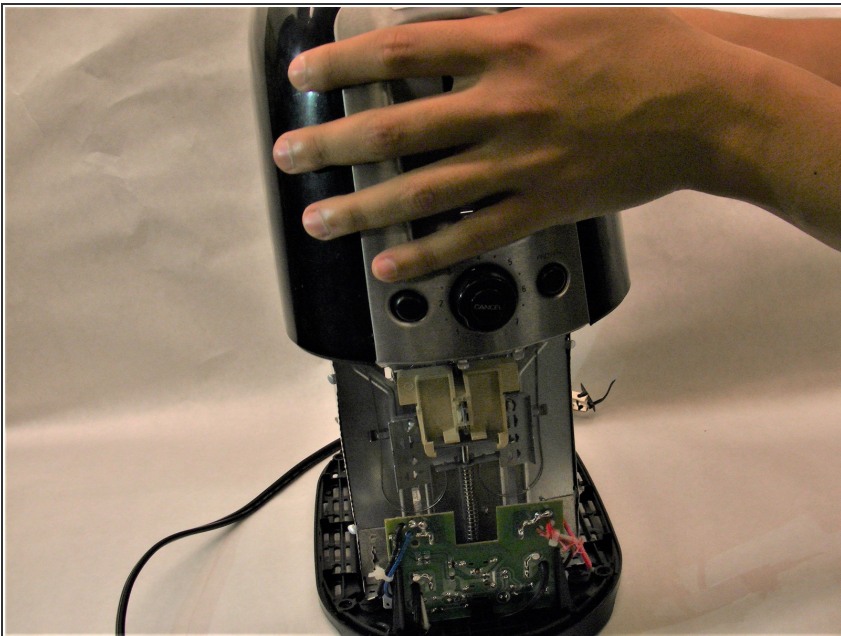

- Lift the top cover up and remove it from the toaster.



Step 7

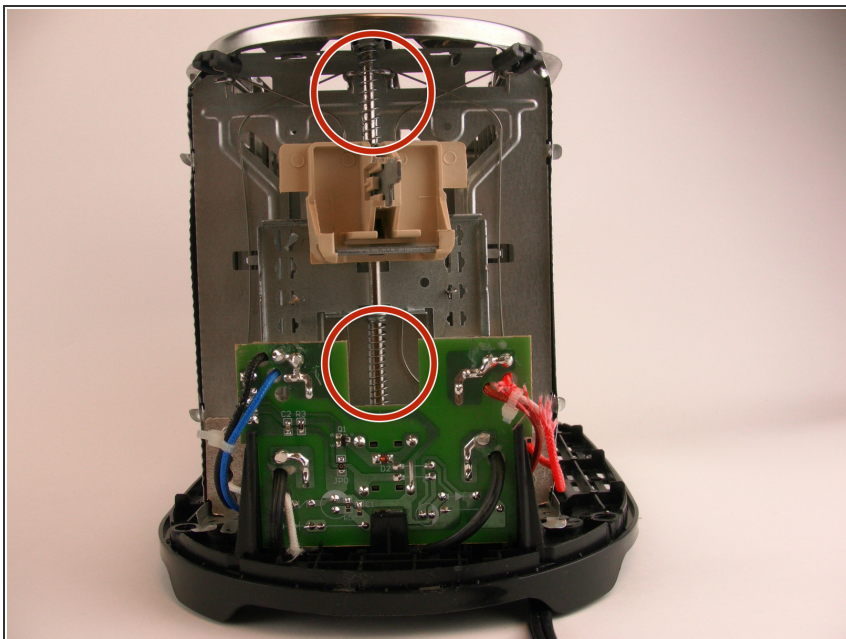

- Locate the springs.


i There is a top spring and bottom spring.

Step 8

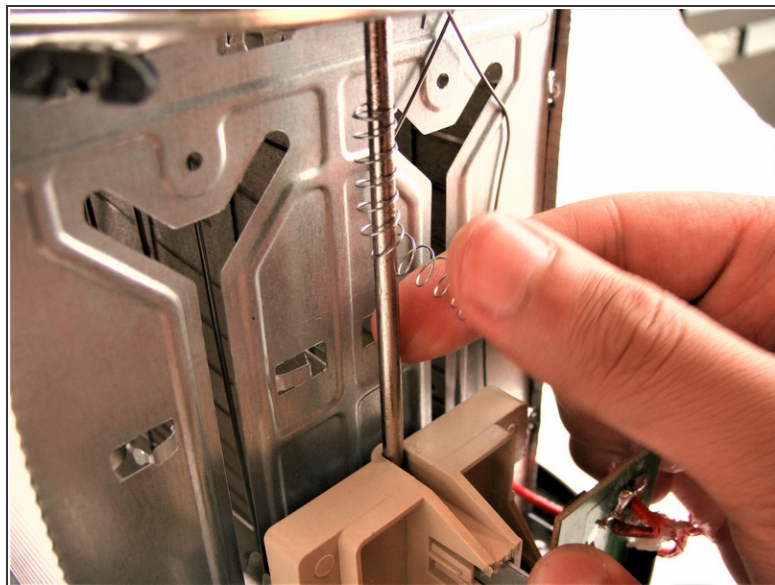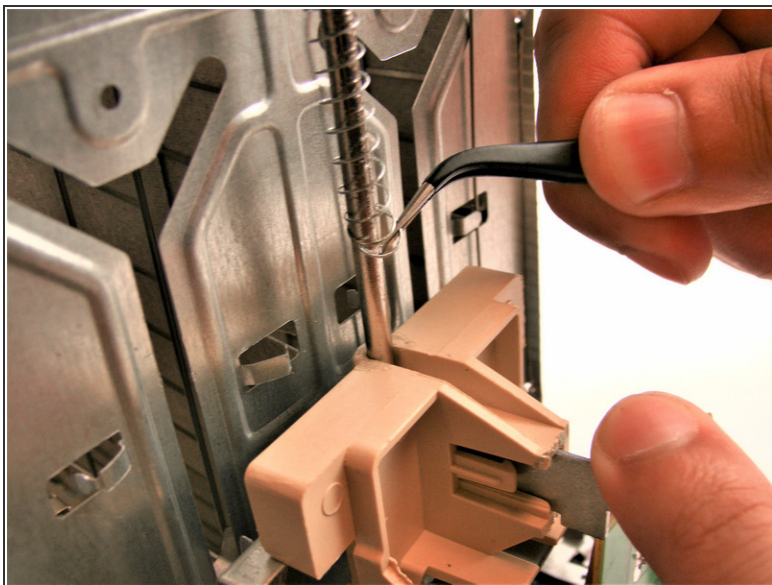

- Use needle nose tweezers to free one end of the spring.
- Turn the spring until it is completely free.

Step 9

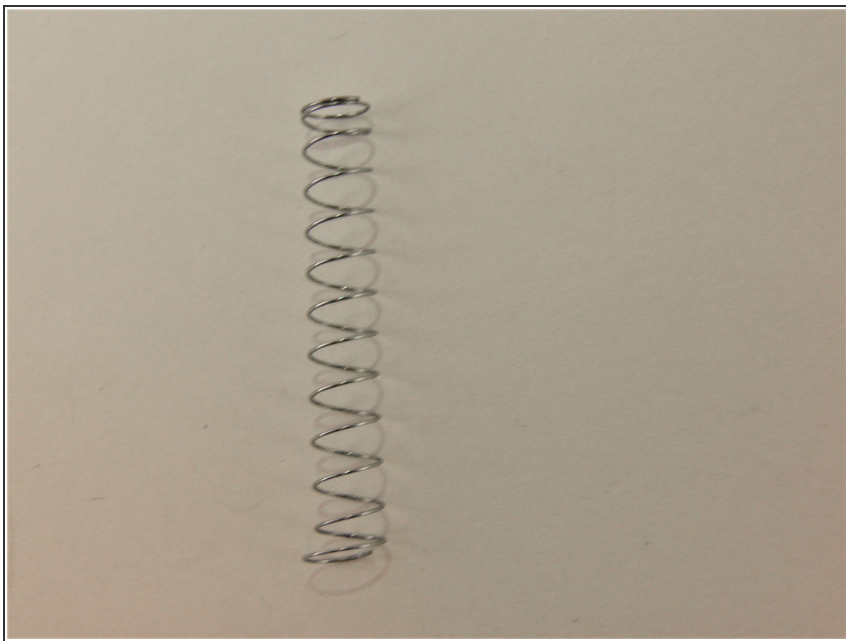

- Remove spring for replacement.
- Repeat steps for bottom spring.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 07:38:02 PM.